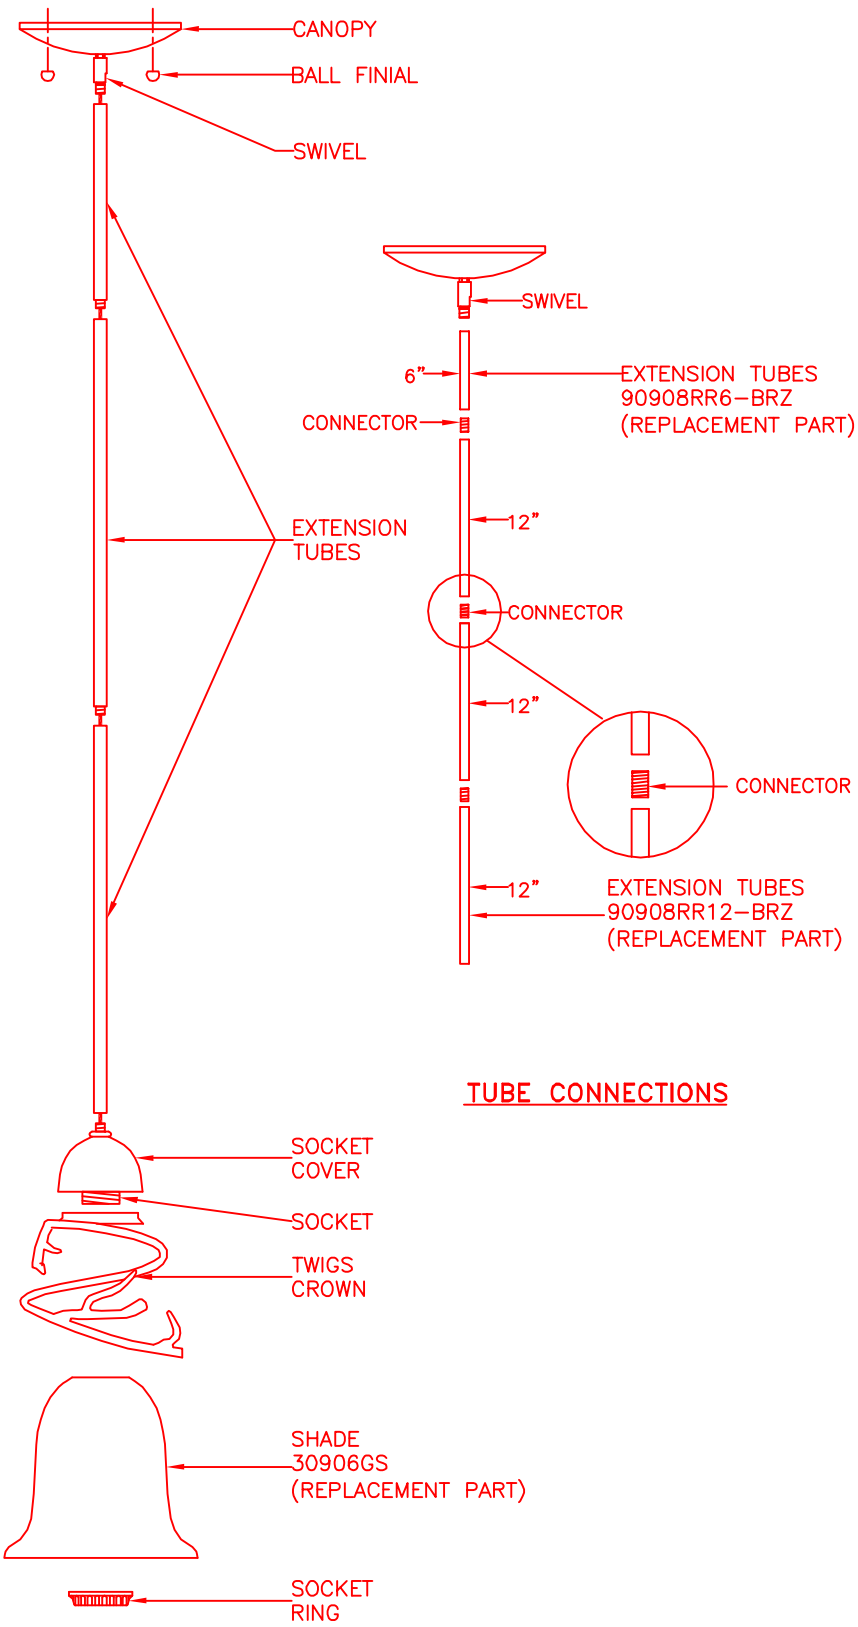

TUBE CONNECTIONS

ASSEMBLY INSTRUCTIONS

READ AND SAVE THESE INSTRUCTIONS

READ INSTRUCTIONS ALL THE WAY THROUGH PRIOR TO ASSEMBLY.

THIS FIXTURE SHOULD TAKE APPROXIMATELY 10 MINUTES TO ASSEMBLE.

MAKE SURE ALL PARTS ARE FIRMLY TIGHTENED.

TOOLS: YOU WILL NEED THE FOLLOWING TOOLS OR EQUIPMENT: LADDER, SCREWDRIVER, ADJUSTABLE WRENCH, WIRE CUTTERS

UNPACK THE FIXTURE

TO PROTECT THE FINISH, PLACE ALL PARTS ON A SOFT SURFACE. YOU SHOULD HAVE RECEIVED THE FOLLOWING:
CANOPY, (1) 6", (3) 12" EXTENSION TUBES, SOCKET ASSEMBLY, DECORATIVE TWIGS, SHADE, SOCKET RING.

MOUNTING HARDWARE PACKAGE:
NIPPLE, (2) 8-32 x 1 1/4" SCREWS, CROSSBAR, GREEN GROUND SCREW, (3) WIRE CONNECTORS, (2) BALL FINIALS.

ASSEMBLE THE FIXTURE

1. USE ANY SINGLE LENGTH OF TUBE SECTION OR CONNECT TUBE SECTIONS TOGETHER WITH TUBE CONNECTORS TO OBTAIN DESIRED LENGTH. INSERT THE WIRES FROM THE SOCKET ASSEMBLY INTO THE BOTTOM OF THE TUBE UNTIL THEY COME OUT AT THE TOP. NEXT, PULL ALL OF THE EXCESS WIRE THROUGH AND SCREW THE TUBE ONTO THE SOCKET ASSEMBLY.

2. FEED WIRES THROUGH SWIVEL AND ATTACH TO TOP OF ROD AS SHOWN.

INSTALL FIXTURE TO CEILING ACCORDING TO INSTALLATION INSTRUCTIONS BEFORE CONTINUING TO FINAL ASSEMBLY.

FINAL ASSEMBLY

1. ATTACH THE DECORATIVE TWIGS AND SHADE TO THE SOCKET AND SECURE WITH SOCKET RING.

2. INSTALL 100 WATT MAXIMUM MEDIUM BASE TYPE "A" BULB (NOT INCLUDED) INTO SOCKET.

3. YOUR NEW FIXTURE IS NOW READY FOR USE.

AVAILABLE PARTS ARE:
30906GS (SHADE)
90908RR12-BRZ (EXTENSION TUBES)
90908RR6-BRZ (EXTENSION TUBES)

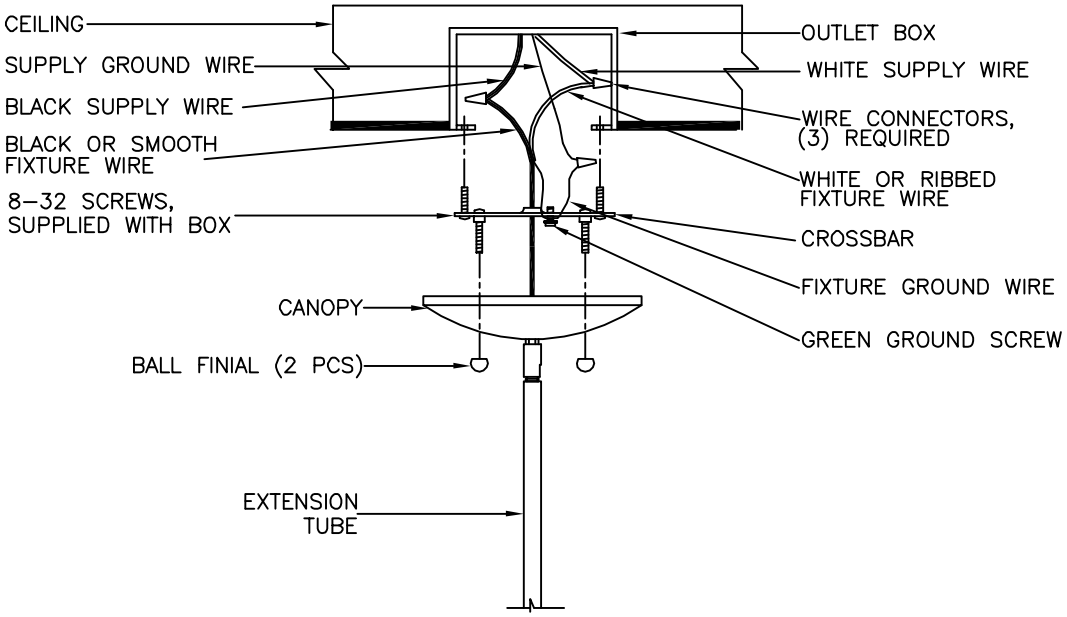

READ AND SAVE THESE INSTRUCTIONS

INSTALLATION INSTRUCTIONS

CAUTION: TO AVOID POSSIBLE ELECTRIC SHOCK, MAKE SURE THE ELECTRICITY IS SHUT OFF AT THE MAIN PANEL. IF YOU ARE REPLACING AN EXISTING FIXTURE, FIRSTLY, TURN THE FIXTURE OFF. NEXT, TURN THE WALL SWITCH OFF. FINALLY, GO TO THE MAIN FUSE OR BREAKER BOX IN YOUR HOME. TURN THE FUSE OR BREAKER TO THE OFF POSITION. SOME TYPES OF FUSES MUST BE UNSCREWED TO SHUT OFF THE POWER.

* ALL WIRING MUST BE DONE IN ACCORDANCE WITH NATIONAL AND LOCAL ELECTRIC CODES.

** IF YOU DO NOT HAVE ELECTRICAL WIRING EXPERIENCE, HAVE YOUR FIXTURE INSTALLED BY A QUALIFIED LICENSED ELECTRICIAN.

*** THIS FIXTURE IS TO BE MOUNTED TO A UL LISTED OUTLET BOX CAPABLE OF SUPPORTING THE WEIGHT OF THIS FIXTURE.
THE OUTLET BOX MUST BE DIRECTLY SUPPORTED BY THE BUILDING STRUCTURE.

****STOP** COMPLETE ASSEMBLY INSTRUCTIONS ON REVERSE BEFORE PROCEEDING WITH INSTALLATION INSTRUCTIONS.**

INSTALL THE FIXTURE

1. INSERT SCREWS INTO CROSSBAR TO LINE UP WITH HOLES ON CANOPY, ATTACH CROSSBAR TO OUTLET BOX USING TWO SCREWS PROVIDED WITH THE OUTLET BOX. (NOTE: IF THE SCREWS WITH THE OUTLET BOX ARE TOO SHORT, USE THE (2) 8–32 x 1 1/4" SCREWS PROVIDED IN THE MOUNTING HARDWARE PACKAGE).

2. CONNECT THE WHITE OR RIBBED FIXTURE WIRE TO THE WHITE SUPPLY WIRE IN THE OUTLET BOX USING THE TWIST–ON WIRE CONNECTOR PROVIDED. CONNECT THE BLACK OR SMOOTH FIXTURE WIRE TO THE BLACK SUPPLY WIRE IN THE SAME MANNER. INSTALL THE FIXTURE GROUND WIRE UNDER THE GREEN GROUND SCREW ON THE CROSSBAR THEN CONNECT THE FIXTURE GROUND WIRE TO THE SUPPLY GROUND WIRE IN THE OUTLET BOX USING THE TWIST–ON WIRE CONNECTOR PROVIDED.

3. RAISE FIXTURE TO THE CEILING AND CAREFULLY TUCK THE WIRES INSIDE THE OUTLET BOX. SPREAD THE ELECTRICAL SPLICES SO THAT THE BLACK WIRES ARE ON ONE SIDE OF THE OUTLET BOX AND THE WHITE WIRES ARE ON THE OTHER SIDE. LINE UP SCREW WITH HOLES IN CANOPY AND SECURE WITH BALL FINIALS.

4. COMPLETE FINAL ASSEMBLY INSTRUCTIONS ON REVERSE TO COMPLETE INSTALLATION.